



unIFY Control Panel

unDX210+ Configuration



QSC, LLC • 1675 MacArthur Boulevard • Costa Mesa, CA 92626
Ph: 800/854-4079 or 714/957-7100 • Fax: 714/754-6174

© 2020 QSC, LLC all rights reserved. QSC and the QSC logo are registered trademarks of QSC, LLC in the U.S. Patent and Trademark office and other countries. All other trademarks are the property of their respective owners. Patents may apply or be pending.

www.qsc.com




The configuration software for the unDX2IO+ is organized into the following key sections:

- Inputs
- Outputs

**Note: Any changes made to device settings will only persist until power is cycled on the device. To retain the settings, they must be stroed to Preset 0 using the Save Presets feature within unIFY Control Panel.*

Inputs

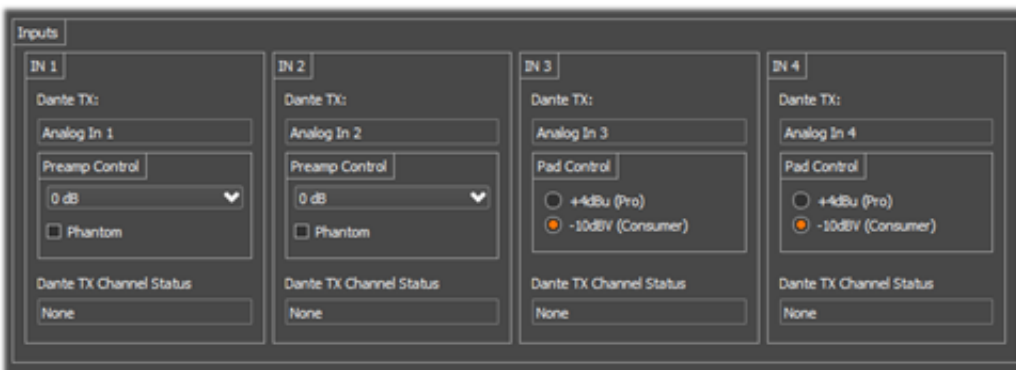

Dante™ TX Channel Name

This text field reports the Dante™ transmit channel name shown on the Dante™ network for corresponding analog input channels.

**Note: This field is non-editable. To edit the channel names, use the device list view control or use Dante™ Controller.*

Preamp Controls (Inputs 1 & 2 only)

The preamp control section allows the user to adjust the microphone preamp gain settings and phantom power states for the corresponding XLR inputs.

Pad Controls (Inputs 3 & 4 only)


The pad control section allows the user to adjust the preamp gain settings for the corresponding Phoenix connector inputs. Each input can be set to either a *Pro* or a *Consumer* setting depending on the expected input level.

Dante™ TX Channel Status

This text field reports the number of active Dante™ receive devices for the corresponding transmitter channel. If no devices are subscribed to the transmitter channel the text field will report *None*.

**Note: This is a read-only field and any channel routing configuration must be performed within Dante™ Controller*

Outputs

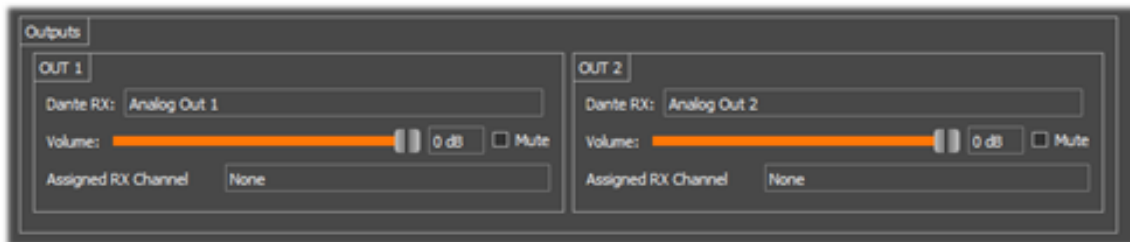

Dante™ RX Channel Name

This text field reports the Dante™ receive channel name shown on the Dante™ network for corresponding analog output channels.

**Note: This field is non-editable. To edit the channel names, use the device list view control or use Dante™ Controller.*

Volume Control

The volume control allows the user to adjust the audio level of the corresponding analog output. Volume settings are between 0 and -60dB.

**Note: The volume control does not apply any gain to the output signal. It is only an attenuation control.*



Mute Control

The mute control allows the user to mute/unmute the corresponding analog output.

RX Channel Assignment

This text field reports the currently assigned Dante™ transmit channel to the corresponding receive channel. If no channel is assigned, the text field will report *None*.

***Note:** *This field is non-editable. To edit the channel names, use the device list view control or use Dante™ Controller.*